



Spring Pressure Chart

BOV 50MM

Engine Vacuum Reading	Use Spring
-----------------------	------------

Between:

- 22 and -23 in/Hg	-12 Psi (-24 in/Hg)
-18 and -21 in/Hg	-11 Psi (-22 in/Hg)
- 14 and -17 in/Hg	-9 Psi (-18 in/Hg)
-10 and -13 in/Hg	-7 Psi (-14 in/Hg)

** Measure engine vacuum at idle.
(engine at operating temperature)

